


**Tools needed:**

- 3mm Hex key
- PH2 screwdriver
- Small, flat screwdriver

- Unscrew the four hex-screws holding the P6 waveguide and take out the waveguide/driver assembly.
- Disconnect the two cables from the driver.
- Unscrew the four screws that hold the driver to the waveguide.
- Place the driver with the back on a flat surface and unscrew the four screws that hold the driver together.

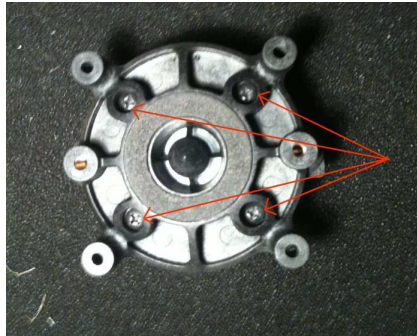

- Use the small, flat screwdriver to carefully pry the three driver parts apart.
- Replace the membrane (shown at center below). Make sure that the tabs fit into the alignment holes when assembling



- Tighten the four driver screws carefully in a cross pattern and make sure they are all properly seated.
- Mount the driver on the waveguide.
- Re-connect the cables. The **RED** cable should be connected to the terminal marked with a **+**
- Re-install the driver/waveguide in the enclosure. Carefully tighten the screws in a cross pattern so that the gasket at the back of the waveguide is compressed.

Please contact Procella Audio directly should you have any further questions.

Email: [sound@procella-audio.com](mailto:sound@procella-audio.com) Website: [www.procella-audio.com](http://www.procella-audio.com)